


ADHESIVE FABRIC



1. Clean the surface, make sure the surface is free of dust, dirt and moisture. Let it dry.



2. Start the application aligning the wallpaper sheet with the top left corner of the wall. The backing paper should be slowly removed while doing the next step (3).

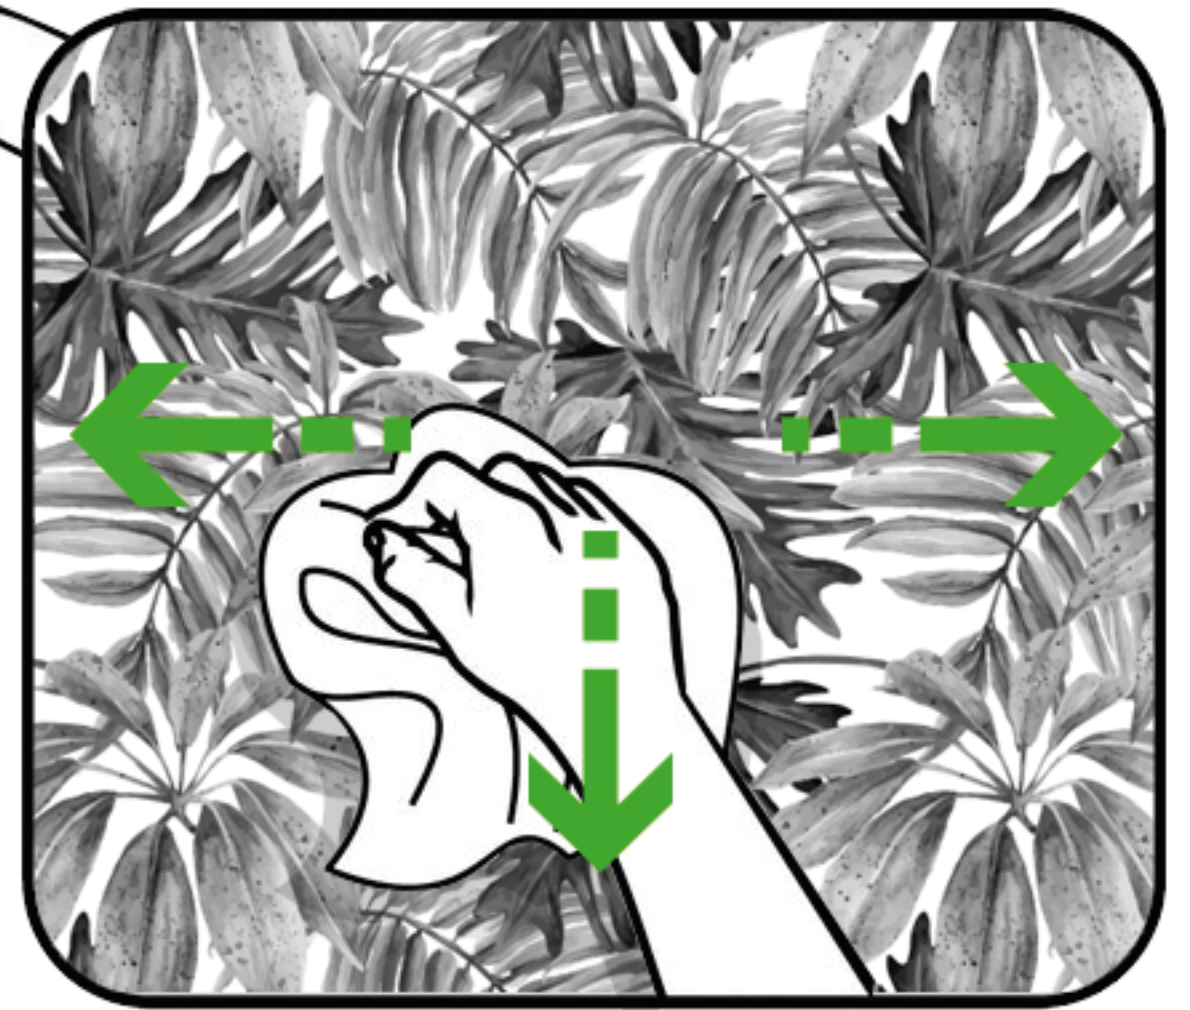

3. Adjust as needed then press firmly with a smooth cloth from center to the left and center to the right, carefully pushing out any air bubbles. Top to bottom.



4. With a hair dryer apply some heat to the wallpaper to activate the glue and seal it. Make sure you do this process on the edges.



5. While applying heat use a smooth cloth and press firmly for a perfect finish and longer durability.